

BIN INDICATOR LAMP

Part Number: 23837

DESCRIPTION:

This option provides a bin level indicator lamp (high or low) that is installed in the Manual Station or J-Box. The indicator lamp is installed in the front panel of the Manual Station if there is a spare I/O position and pushbutton or LED. If there is no room in the Manual Station, the indicator lamp is installed in the J-Box.

OPERATION:

Not Applicable.

SYSTEM REQUIREMENTS:

- The indicator lamp is installed in the Manual Station if there is a spare I/O position and pushbutton or LED.
- If there is no room in the Manual Station, the indicator lamp is installed in the J-Box.

IMPLEMENTATION:

(If the indicator lamp is installed in the Manual Station):

- Install the input Opto module in the correct slot in the J-Box.
- If a pushbutton lamp is used in the Manual Station, configure the pushbutton.

(If the indicator lamp is installed in the J-Box):

- Install the indicator lamp in the J-Box door.

www.commandalkon.com

Command Alkon Headquarters

1800 International Park Drive, Suite 400
Birmingham, Alabama 35243
Phone: 1-205-879-3282
Toll Free: 1-800-624-1872
Fax: 1-205-870-1405