

BLOWER CONTROL, (AIR SLIDE or SILO AERATION)

Part Number: 23830

DESCRIPTION:

This option provides control for an external low-pressure aeration system for a Silo and/or an Air Slide.

OPERATION:***Automatic***

- Not Applicable.

Manual

- The operator presses the BLOWER maintained pushbutton on the Manual Station. The Blower continues running until the operator presses the pushbutton again.

SYSTEM REQUIREMENTS:

- BLOWER output - an unassigned I/O position controlled by a pushbutton on the Manual Station.
- (CEM AER output - comes standard with the system and should already be configured.)

IMPLEMENTATION:

- Install the Opto module in the correct slot in the J-Box.
- Configure BLOWER pushbutton on the Manual Station.

www.commandalkon.com**Command Alkon Headquarters**

1800 International Park Drive, Suite 400
Birmingham, Alabama 35243
Phone: 1-205-879-3282
Toll Free: 1-800-624-1872
Fax: 1-205-870-1405