

TELESCOPIC BOOT CONTROL (INCHING)

Part Number: 23833

DESCRIPTION:

This option provides inching control for dual-action boot solenoids that control the up and down movement of the boot that directs material into a truck .

OPERATION:

The operator presses and holds down the momentary BOOT UP or BOOT DOWN button on the manual station to move the boot up or down. The boot moves up or down as long as the button is pressed.

NOTE: If the boot is controlled by a single-action (non-inching) solenoid, see the “Telescopic Boot Control (Maintained Output)” Product Description.

SYSTEM REQUIREMENTS:

- BOOT UP output - an unassigned I/O position controlled by a pushbutton on the Manual Station.
- BOOT DOWN output - an unassigned I/O position controlled by a pushbutton on the Manual Station.

IMPLEMENTATION:

- Install the Opto module in the correct slot in the J-Box.
- Configure the BOOT UP and BOOT DOWN pushbuttons on the Manual Station.

www.commandalkon.com

Command Alkon Headquarters

1800 International Park Drive, Suite 400

Birmingham, Alabama 35243

Phone: 1-205-879-3282

Toll Free: 1-800-624-1872

Fax: 1-205-870-1405