

TELESCOPIC BOOT CONTROL (MAINTAINED)**Part Number: 23833****DESCRIPTION:**

This option provides control for a single-action boot solenoid that controls the up and down movement of the boot that directs material into a truck.

OPERATION:

The operator presses the maintained BOOT UP / DOWN button on the manual station to move the boot up or down. When the operator presses the button again, the boot moves in the other direction.

NOTE: If you need to control the distance the boot moves each time, see the "Telescopic Boot Control (Inching)" Product Description.

SYSTEM REQUIREMENTS:

- BOOT UP / DOWN output - an unassigned I/O position controlled by a pushbutton on the Manual Station.

IMPLEMENTATION:

- Install the Opto module in the correct slot in the J-Box.
- Configure the BOOT UP / DOWN pushbutton on the Manual Station.

www.commandalkon.com**Command Alkon Headquarters**

1800 International Park Drive, Suite 400
Birmingham, Alabama 35243
Phone: 1-205-879-3282
Toll Free: 1-800-624-1872
Fax: 1-205-870-1405