

SPRAY BAR CONTROL, AUTO/MANUAL

Part Number: 23835

DESCRIPTION:

This option provides controls for a spray bar located near the boot where material is discharged into the truck.

OPERATION:

Automatic

- The AUTO SPRAY BAR output comes on when discharge starts and goes off when the scales are finished discharging.

Manual

- The operator deactivates the AUTO SPRAY BAR maintained pushbutton on the Manual Station then presses the manual SPRAY BAR pushbutton.

SYSTEM REQUIREMENTS:

- AUTO SPRAY BAR output - an unassigned I/O position controlled by a pushbutton on the Manual Station.
- SPRAY BAR output - an unassigned I/O position controlled by a pushbutton on the Manual Station.

IMPLEMENTATION:

- Install the Opto module in the correct slot in the J-Box.
- Configure pushbuttons on the Manual Station.

www.commandalkon.com

Command Alkon Headquarters

1800 International Park Drive, Suite 400
Birmingham, Alabama 35243
Phone: 1-205-879-3282
Toll Free: 1-800-624-1872
Fax: 1-205-870-1405